

# Assembly and operating instructions

## "Do - It - Yourself - Barbecue"



### Foreword

Please read this assembly and operation manual carefully before you start using your **GRILLCHEF** barbecue.

You will quickly determine:

The assembly and operation processes are simple and straightforward. Malfunctions can be excluded if the barbecue is operated properly as a charcoal grill outdoors.

### Proper utilisation

The barbecue may only be used for preparing suitable foods. All requirements of this assembly and operation manual must be complied with.

**Only for private use!**



### **WARNING - risk of burning!**

- ⇒ The barbecue must be positioned on a stable and secure surface when it is in use, otherwise it may tip over.
- ⇒ **CAUTION!** This barbecue becomes very hot and should not be moved while it is being used!
- ⇒ Wear oven gloves or use grilling tongs when barbecuing.
- ⇒ Allow the barbecue to cool down completely before cleaning it.
- ⇒ **CAUTION!** Do not use spirit or petrol to light or re-light the fire!
- ⇒ **CAUTION!** Only use firelighters that correspond to the European Standard for firelighters (EN 1860-3)!

⇒ Never use water to extinguish the charcoal.



### **WARNING - risk of suffocation!**

⇒ Do not use indoors!



### **DANGER to children and pets!**

⇒ Never leave the hot barbecue unattended.

⇒ **CAUTION!** Keep children and pets at a safe distance!

## General information for successful assembly


Please read the assembly instructions carefully and follow the safety precautions. Allow sufficient time for assembly. Before starting assembly, clear an area measuring approximately two to three square metres. Remove the item from the packaging! Lay out all of the parts and any necessary tools so that they are within easy reach.

## Parts List

A.	Cooking Grill	1
B.	Grill Handle	2
C.	Charcoal Grid	1
D.	Heavy Duty Charcoal Hearth	1


## Preparing assembly

Please check to make sure that all of the components have been supplied using the following list and drawing. Lay out all of the parts and any necessary tools so that they are ready for assembly.

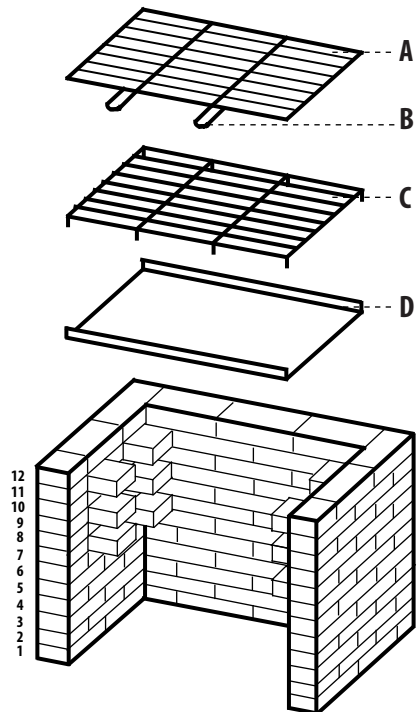

## Assembly procedure

1. Having made the decision where to erect the barbecue (it requires a strong and even base) you need approx. 135 bricks and the following material and tools to build the barbecue:
  - 8 - 10 kg cement
  - 40 - 50 kg sand
  - Water
  - Brick trowel
2. Place the first course of bricks in position around the three sides of the cooking grill. Score or mark their positions on the foundation.
3. Build six courses of normal brickwork above ground level according to the shown pattern in **sketches 1 and 2**.
4. The seventh course needs to be built according to **sketch 3**. This course will support the charcoal grid. For the eighth course see **sketch 2**.
5. Ninth and eleventh course need to be built as shown in **sketch 3**. These courses will provide the lower and higher cooking grill position. Twelfth course to be built as shown in **sketch 2**.
6. After having erected the masonry barbecue and a certain period of drying and hardening you can slide the metal parts into position as shown in the exploded diagram and the assembled diagram below. To provide different cooking heights and different temperatures there are two positions for the cooking grill.

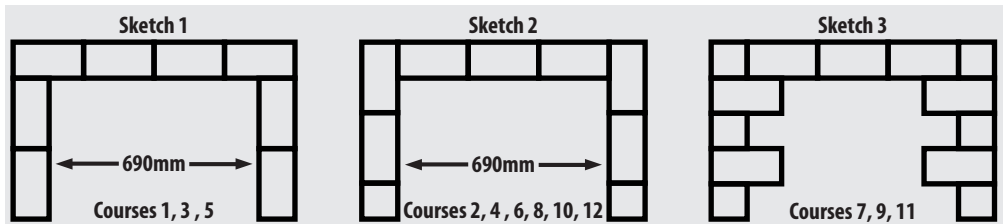

## Information for safe operation of the barbecue

The barbecue must be positioned on a stable and secure surface when it is in use.

Do not use in enclosed areas or on covered surfaces.  
**Only use safe lighting materials (such as LANDMANN solid firelighters).**

The fuel container has a capacity of approximately 2 kg.

**Before using the barbecue for the first time, it should be heated with fuel (charcoal or briquette) for approximately 30 minutes.**

## Igniting the fuel



### **WARNING - risk of burning!**

**When petrol or white spirits are ignited uncontrollable heat can develop as a result of deflagration. You should therefore only use harmless fuel, such as firelighters. The barbecue must be positioned on a stable and secure surface when it is in use.**

1. Use quality products from LANDMANN, such as LANDMANN charcoal, LANDMANN briquettes and LANDMANN solid firelighters.
2. Stack a portion of the charcoal or briquettes on the charcoal grid.
3. Ignite one or two solid firelighters using a long match. Place these firelighters on top of the layer of charcoal or briquettes.
4. Allow the solid firelighters to burn for 2 to 4 minutes. Then fill the fire bowl slowly with the charcoal or briquettes.
5. Only start cooking when the fuel is coated with a layer of ash! This indicates that the optimal grilling condition has been reached. Distribute the food to be barbecued evenly in the fire bowl.
6. Insert the cooking grill and then you can start barbecuing.

## Cleaning / care



### **WARNING - risk of burning!**

**Allow the barbecue to cool down completely before cleaning it. Never use water to quench the hot barbecue. This could result in burning or scalding.**

Occasional cleaning is necessary to preserve the beautiful appearance of the barbecue. Do not use any scouring agents. Never use water to quench the hot barbecue.

1. A rinsing cloth and some water with a commercial detergent is sufficient for the normal cleaning process.
2. Clean the grill using washing-up liquid or stainless steel scouring pads.

## Environmental Protection & Disposal

Pay attention to cleanliness and safety measures when using the barbecue and dispose of waste in a clean and safe manner. As a matter of principle, only dispose of waste in the designated metal or non-flammable containers.

## Warranty

We guarantee the barbecue for two years from the date of purchase. The warranty covers the repair of manufacturing defects and the replacement of defective parts. Costs for postage, assembly, replacement of worn parts (fire bowl, coal grate, grill) and other costs are not covered by this guarantee. The warranty shall expire in the event of incorrect handling and any kind of unauthorised modification of the barbecue.



**LANDMANN® Ltd.**  
Unit 6 Blackstone Road,  
Stukeley Meadows Industrial Estate,  
Huntingdon, Cambs, PE29 6EF,  
United Kingdom

**Hotline**  
Monday to Thursday 9am to 5pm,  
Friday, 9am to 4pm.

+44 0871-231-1990